



Enterprise IT FAQ

Physical

* *Dimensions*

Rackmount Chassis 1U
Gear for center slide mount and 4 post rail mount.
Dimensions (in): 1.7" H x 17.2" W x 19.8" D
Weight (lbs): 35

* *Power consumption*

- AC input voltage 100-240 volts
- Power supply 520 watts

Networking

* *2 x 1Gbps ethernet, RJ45 connectors*

-- 1 dedicated to admin console access.

System Software

* *Unix*

[Operating Systems:
-- RHEL v4, update 4 and trimmed. ONLY for ClearCase users.
-- FC6 plus updates and trimmed.]

* *Can Krugle login to the machine remotely?*

Krugle does not require login access to the Krugle Enterprise appliance. If login access is needed (i.e. for assisting with support), Krugle will only be able to login with proper credentials that you provide from your access control system.

* *Root account access?*

Root access is not available. As this is an appliance all access is through the Admin Console.

Application Software

* *Does KE:*

Phone home?

No.

Probe our network?

No.

Send out email?

Yes. Configured through Admin Console

Access anything off the box?

Yes. Right now:

- **DNS (configured through Admin Console)**
- **SCM repositories (configured through Admin Console)**
- **Public Krugle web services for public code, project, etc.**
- **NTP services (configured through Admin Console)**

Support SNMP?

= Not at the moment.

* *How are software updates done?*

Admin user initiates update through the admin console.

* *How are backups done?*

Admin user configures through the admin console and the backups should be copied to a separate backup server.